 




技术参数:

- 工作原理: 压差原理
- 指向特性: 心型
- 频率响应: 20Hz-20kHz
- 灵敏度: $-34 \pm 3\text{dB}$ (at 1kHz)
- 最大声压级: 130dB (0.8% THD at 1kHz)
- 等效噪声级: $<14\text{dBA}$ 计权
- 输出阻抗: $\leq 200 \Omega$
- 负载阻抗: $\geq 1000 \Omega$
- 供电电压: DC幻像电源48V
- 单体尺寸: $\Phi 54 \times 160\text{mm}$
- 单体重量: 500g

 
频率响应曲线图:

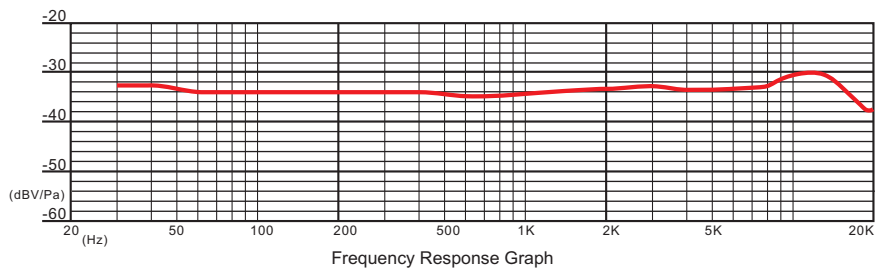

连接线的安装与拆卸:

- 把卡侬 (XLR) 插头插入麦克风, 旋转插头使上面的扣键与麦克风上的槽口对准, 然后将插头推入麦克风, 直至扣键定位。
- 麦克风与连接线分开时, 可握住插头, 同时按压扣键, 然后将插头从麦克风拉出。

连接幻像电源:

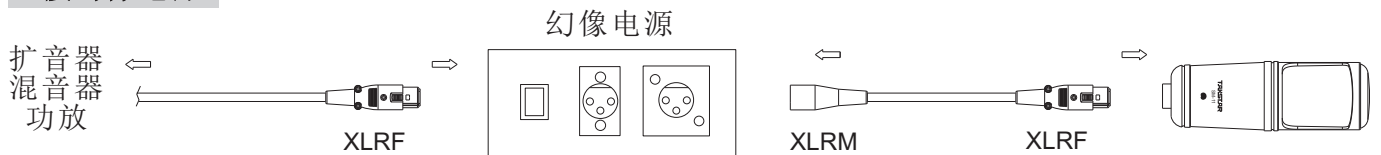

使用说明:

- 使用时, 应先将扩音器或调音台音量控制调到最小, 然后将幻像电源与麦克风连接好, 再打开幻像电源的电源开关, 并将声量从小到大慢慢调节至合适, 以免喇叭受到冲击。
- 用手罩住麦克风头部, 或使麦克风接近扬声器, 可能产生啸叫声, 遇此情形时, 首先降低音量, 拉开同扩音器的距离, 尽量使麦克风不同扩音器相对。
- 麦克风灵敏度高, 必须注意不要从高处落下或给予强烈冲击。
- 麦克风不使用时应存放在干燥清洁的地方, 避免在温度、湿度过高的场所保管或使用, 以免影响灵敏度和音色。

※本产品相关规格及配置如有变更, 恕不另行通知。

 
※如需服务和配件方面的信息, 请就近和得胜代理商联系, 或请访问得胜网站www.takstar.com。



Specification:

Transducer Type: Pressure Gradient
 Polar Pattern: Cardioid
 Frequency Response: 20Hz-20kHz
 Sensitivity: $-34 \pm 3\text{dB}$ (at 1kHz)
 Max. Input SPL: 130dB (0.8% THD at 1kHz)
 Self Noise: <14dB A Weighted
 Output Impedance: $\leq 200 \Omega$
 Load Impedance: $\geq 1000 \Omega$
 Phantom Power Requirement: DC Phantom 48V
 Body Dimensions: $\Phi 54 \times 160\text{mm}$


Frequency Response Graph:

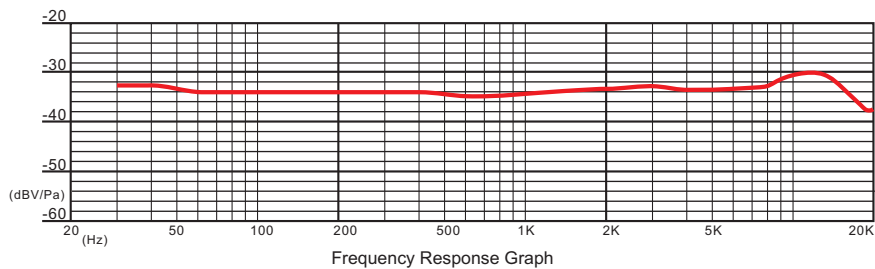

Connecting And Disconnecting The Microphone Cable:

1. Insert the XLR connector into the microphone. If necessary, rotate the connector to align the key on the connector and the groove in the microphone. Push the connector into the microphone until it clicks.
2. To disconnect the cable and microphone, grasp the connector while depressing the tab. Pull the connector away from the microphone.

 Operation:

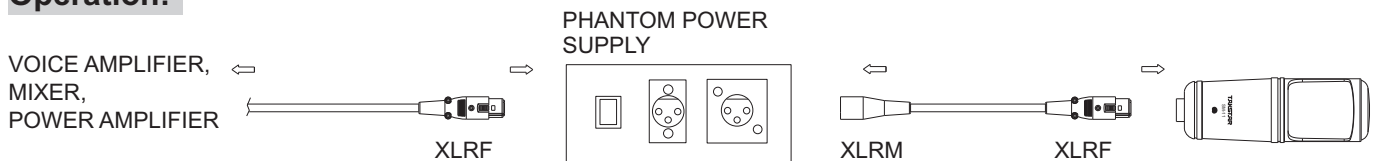

Usage:

1. Turn on the amplifier or mixing board and set the volume control to minimum position. To connect the phantom power to the microphone turn on the phantom switch, and then accommodate the volume control from low to the required are so as to obtain the desired effect.
2. If the head of the microphone is covered by hand or brought close to the speaker, a howling sound may be generated. To prevent this, first decrease the volume, then place the microphone so that it is not pointed to the speaker and that there is a sufficient distance between the microphone and speaker.
3. The cartridge is very sensitive. Don't drop, hit it or apply any strong shock to it.
4. To maintain the sensitivity and quality of the sound reproducing, avoid exposing it to moisture and extreme temperatures.

※ The related specification or deployment are subject to change without any prior notice.

 
※ For additional information about service or parts, please contact your local authorized Takstar Service Center or visit Takstar at www.takstar.com.



技术参数:

- 工作原理: 压差原理
- 指向特性: 心型
- 频率响应: 20Hz-20kHz
- 灵敏度: -34dB (at 1kHz)
- 最大声压级: 126dB (0.8% THD at 1kHz)
- 等效噪声级: <16dB A计权
- 输出阻抗: $\leq 200 \Omega$
- 负载阻抗: $\geq 1000 \Omega$
- 供电电压: DC幻像电源48V
- 单体尺寸: $\Phi 67 \times 151 \text{mm}$
- 单体重量: 550g


频率响应曲线图:

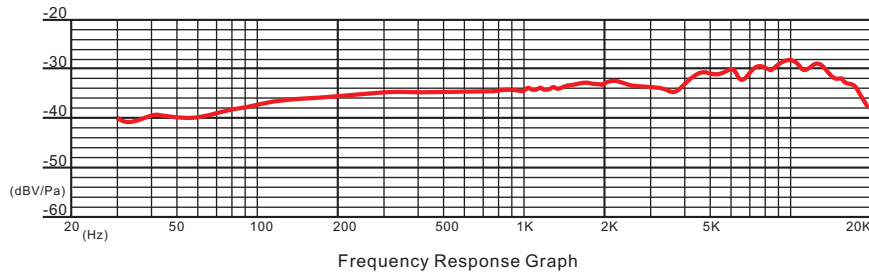

连接线的安装与拆卸:

1. 把卡侬 (XLR) 插头插入麦克风, 旋转插头使上面的扣键与麦克风上的槽口对准, 然后将插头推入麦克风, 直至扣键定位。
2. 麦克风与连接线分开时, 可握住插头, 同时按压扣键, 然后将插头从麦克风拉出。

 连接幻像电源:

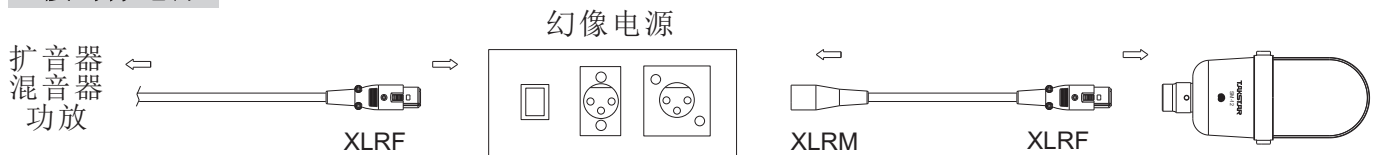

使用说明:

1. 使用时, 应先将扩音器或调音台音量控制调到最小, 然后将幻像电源与麦克风连接好, 再打开幻像电源的电源开关, 并将音量从小到大慢慢调节至合适, 以免喇叭受到冲击。
2. 用手罩住麦克风头部, 或使麦克风接近扬声器, 可能产生啸叫声, 遇此情形时, 首先降低音量, 拉开同扩音器的距离, 尽量使麦克风不同扩音器相对。
3. 麦克风灵敏度高, 必须注意不要从高处落下或给予强烈冲击。
4. 麦克风不使用时应存放在干燥清洁的地方, 避免在温度、湿度过高的场所保管或使用, 以免影响灵敏度和音色。

※本产品相关规格及配置如有变更, 恕不另行通知。

 
※如需服务和配件方面的信息, 请就近和得胜代理商联系, 或请访问得胜网站www.takstar.com。



Specification:

Transducer Type: Pressure Gradient
 Polar Pattern: Cardioid
 Frequency Response: 20Hz-20kHz
 Sensitivity: -34dB (at 1kHz)
 Max. Input SPL: 126dB (0.8% THD at 1kHz)
 Self Noise: <16dB A Weighted
 Output Impedance: $\leq 200 \Omega$
 Load Impedance: $\geq 1000 \Omega$
 Phantom Power Requirement: DC Phantom 48V
 Body Dimensions: $\Phi 67 \times 151 \text{mm}$
 Net Weight: 550g


Frequency Response Graph:

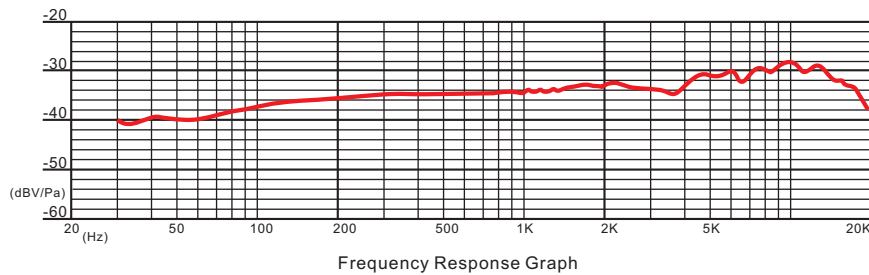

Connecting And Disconnecting The Microphone Cable:

1. Insert the XLR connector into the microphone. If necessary, rotate the connector to align the key on the connector and the groove in the microphone. Push the connector into the microphone until it clicks.
2. To disconnect the cable and microphone, grasp the connector while depressing the tab. Pull the connector away from the microphone.

 Operation:

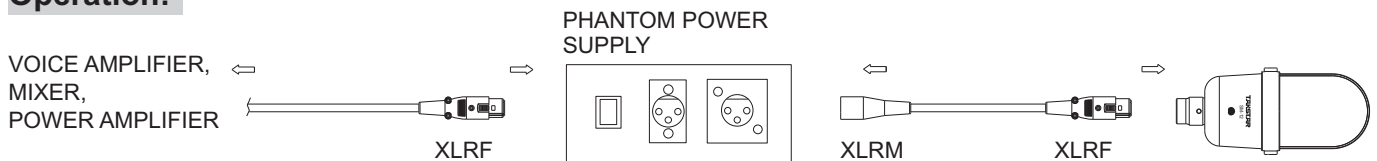

Usage:

1. Turn on the amplifier or mixing board and set the volume control to minimum position. To connect the phantom power to the microphone turn on the phantom switch, and then accommodate the volume control from low to the required are so as to obtain the desired effect.
2. If the head of the microphone is covered by hand or brought close to the speaker, a howling sound may be generated. To prevent this, first decrease the volume, then place the microphone so that it is not pointed to the speaker and that there is a sufficient distance between the microphone and speaker.
3. The cartridge is very sensitive. Don't drop, hit it or apply any strong shock to it.
4. To maintain the sensitivity and quality of the sound reproducing, avoid exposing it to moisture and extreme temperatures.

※ The related specification or deployment are subject to change without any prior notice.
 ※ For additional information about service or parts, please contact your local authorized Takstar Service Center or visit Takstar at www.takstar.com.