

TAKSTAR® 得勝

用户手册
User Manual

TAKSTAR®

广东省电声工程技术研究开发中心
广东得胜电子有限公司制造
地址：广东省惠州市博罗县龙溪镇富康一路2号
邮编：516121

全国服务热线：400 6828 333

传真：0752-6383950

邮箱：xs@takstar.com

网址：www.takstar.com

Guangdong Takstar Electronic Co., Ltd.
Address: No. 2 Fu Kang Yi Rd., Longxi Boluo Huizhou,
Guangdong 516121 China
Tel: 86 752 6383644
Fax: 86 752 6383952
Email: sales@takstar.com
Website: www.takstar.com



E128
扩音器 (数码播放器)
Amplifier (digital player)

目 录

Contents

目录.....	01
Contents.....	01
前言/产品特性.....	02
Foreword/Features.....	05
控制面板功能示意图.....	02-03
Function Illustration.....	05-06
使用说明/注意事项.....	03
Operation Instruction/Cautions.....	06
技术参数/标准配置/适用场合.....	04
Specification / Product Content /Application.....	07

- * 得胜公司保留对本说明书中描述的产品及说明书内容更新和改进的权利，如有更改，恕不另行通知。
- * 如有疑问，请关注本公司的文宣资讯或网上查询：www.takstar.com对其中涉及的描述和图像，以包装箱内内容和实物为准！
- * Takstar reserves the rights to change the product and user manual without prior notice.
- * If you have any question, please pay attention to our company information or website www.takstar.com. The description and image may subject to change, please in kind prevail.

产品服务保证书

注意事项:

1. 本单为保修凭证, 请用户妥善保管, 如有遗失, 恕不保修或退换。
2. 保修期限制: 购买之日起十二个月内。
3. 除了不可抗力事件损坏外, 由本公司负责, 免费维修。
4. 如属保管不善或使用不当造成的损坏, 维修点将酌情收费。
5. 擅自拆卸维修者, 不予保修。
6. 以上保修条款仅限于中国内地市场适用 (不包含港澳台地区)。

姓名: _____ 电话: _____ 地址: _____

商品: _____ 型号: _____ 购买日期: _____ 年 _____ 月 _____ 日

维修记录栏(由维修员填写)	维修员签名	日期

◆ 广东得胜电子有限公司 ◆ 电话: 400-6828-333 ◆ 地址: 广东省惠州市博罗县龙溪镇富康一路2号



尊敬的用户:

感谢您选购TAKSTAR E128多媒体扩音器, 为了您能够更好的了解使用本产品, 建议您在使用前仔细阅读本说明书。


若存在有疑问或者您有宝贵的建议, 可通过拨打得胜官方服务热线 400 6828 333 或使用微信扫描二维码关注得胜官方公众号与我们联系。



产品特性

- 集麦克风、功放、音箱、充电器、电池为一体的便携式数字扩音器
- 综合应用数字电声技术, 能输出高达8W的音乐功率
- 具有单曲循环、音乐播放功能, 支持TF存储卡上的多媒体音频文件播放
- 支持手机无线播放功能, 高效稳定传输, 自由享受无线音乐播放
- 内置大容量耐久型锂离子电池, 充电约3小时, 使用时间可达15小时以上
- 灵活可变的多种佩挂方式, 方便不同用户的使用
- 产品依照人体工学原理设计, 造型新颖, 外观时尚, 使用舒适

控制面板功能示意图

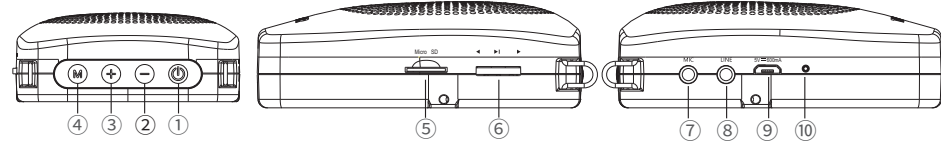

- ① 电源开关 ⏻ : 长按电源按键2秒开启电源, 绿灯亮 (并发出提示音); 开机后无任何设备连接时, 整机为待机状态; 5分钟内无任何设备连接时自动关机
- ② 主音量减-: 点按主音量减小一级音量, 长按连续减小, 当音量减小, 声音会保留-10dB
- ③ 主音量加+: 点按主音量增加一级音量, 长按连续增加, 音量较大时发出beep提示音
- ④ 输入切换模式 M: 点按按键为切换输入模式, 长按2秒为设定或取消音乐单曲循环
- ⑤ TF卡座: TF卡插入时自动切换到TF卡并播放, 蓝灯慢闪 (根据示意图标识方向插入, 取卡时将卡往下按并松开TF卡会自动弹出)
- ⑥ 媒体功能键: 重复点按媒体功能键 \blacktriangleright | 播放/暂停音乐播放, 播放时蓝灯慢闪, 暂停时蓝灯长亮; 向上推动媒体功能键 \blacktriangleright 并释放, 切换上一曲; 向上推动并按住, 媒体音量加; 向下推动媒体功能键 \blacktriangleleft 并释放, 切换下一曲; 向下推动并按住, 媒体音量减

- ⑦ MIC输入插孔：将Φ3.5mm的麦克风插头插入此孔，进入扩音工作状态；操作时，请不要将麦克风的拾音面朝向扩音器的扬声器，以免产生啸叫（当MIC插入时会自动停止所有设备播放；当要播放时需重按播放按键▶|）
- ⑧ LINE线路输入插孔：当3.5音源线插入时蓝灯长亮，并且自动停止所有播放设备，作为源音箱使用（LINE线路输入时为固定模式，不支持与媒体相互切换功能）
- ⑨ Micro USB充电输入插孔：此孔为电池充电插孔
- ⑩ 充电指示灯：充电时亮红灯，充满电时亮绿灯

使用说明

1. 将头戴麦克风正确的佩戴在头部，并调整好麦克风的拾音角度和距离；
2. 将Φ3.5mm的麦克风插头插入麦克风输入孔内；
3. 打开电源，电源指示灯亮，调整音量按键到合适的音量大小；
4. 使用过程中，若电量指示灯亮红色并语音提示时，电池已处于低电量状态，请及时充电。

注意事项

为避免电击、过高温度、着火、辐射、爆炸、机械危险以及使用不当等可能造成的人身伤害或财产损失，使用本产品，请仔细阅读并遵守以下事项：

1. 使用产品时请确认所连接设备与本产品功率是否匹配以及合理调整音量大小，不要在超过产品功率及大音量下长时间使用，以免造成产品异常和耳朵听力损伤；
2. 使用中若发现有异常（如冒烟、异味等），请立即关闭电源开关并拔掉电源插头，然后将产品送经销商检修；
3. 本产品及配件都应放置在室内干燥通风处，勿长期存放在潮湿、灰尘多的环境，使用中避免靠近裸露火源、碰到液体物质、雨淋、产品进水、过度碰撞、抛掷、振动本机及覆盖通风孔，以免损坏其功能；
4. 若产品需要固定于墙壁或天花板上时，请确保固定到位，防止因固定强度不足导致产品发生跌落危险；
5. 使用该产品时需遵守相关安全规定，法律法规明确禁止使用场合请勿使用本机，以免导致意外事故；
6. 请不要自行拆机改装或维修，以防止出现人身伤害，如有问题或服务需求请联系当地经销商跟进处理。

环保说明



此标志适应于在中国销售的电子信息产品，依据2006年2月28日公布的《电子信息产品污染控制管理办法》以及SJ/T11364-2006《电子信息产品污染控制要求》，表示该产品在使用完结后可再利用。数字标识的是环境保护使用期限，只要遵守与本产品有关和使用的注意事项，从制造日算起在数字所表示的年限内，产品不会产生环境污染和对人体、财产的影响。

电池等附属品和产品一同包装的，产品和附属品的环保使用期限可能不同。

产品适当使用后报废的方法请遵从点在信息产品的回收、再利用相关法令。详细请咨询各级政府主管部门。

产品中所含有毒有害物质或元素的名称及含量

部分名称 (大体分类)	有毒有害物质或元素					
	铅 (Pb)	水银 (Hg)	镉 (Cd)	六价铬 (CrVI)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
机体 (金属部件)	×	○	○	○	○	○
实装基板/电器部件	×	○	○	○	○	○
缆线类	×	○	○	○	○	○
备注	×：表示该有毒有害物质在该部件所有均材料中的含量均在SJ/T11363-2006标准规定的限量要求以下。 ○：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006标准规定的限量要求。 因为在当代技术下还没有可替代的物质。					

Specification

- Frequency Response: 80Hz-12KHz
- Peak Power: 8W THD+N<10%
- Mic Input Sensitivity: -30dBV±2dBV, @1W, 1KHz
- Line Input Sensitivity: -19dBV±2dBV, @1W, 1KHz
- Operating Voltage: DC 3.6-4.2V
- Battery Specification: 3.7V/1000mAh
- Recharging Specification: DC 5V/600mA
- Recharging Time: approx. 3 hours
- Operating Time: ≥15 hours
- Wireless Operating Range: approx. 10m (open area)
- Music Media Format: MP3, WAV
- Max TF Card Capacity: 64GB
- Net Weight: 116g
- Dimension: 93x77x30mm

Product Content

E128 amplifier	1 pc
HM-850 headworn microphone	1 pc
USB recharging cable	1 pc
Strap	1 pc
QC card	1 pc
User manual	1 pc

Application

- Teaching, tour guiding, training, promotion, propaganda, morning exercise, entertainment

技术参数

- 频率响应：80Hz-12KHz
- 峰值功率：8W THD+N<10%
- 话筒输入灵敏度：-30dBV±2dBV, @1W, 1KHz
- 线路输入灵敏度：-19dBV±2dBV, @1W, 1KHz
- 工作电压：DC 3.6-4.2V
- 电池规格：3.7V/1000mAh
- 充电规格：DC 5V/600mA
- 充电时间：约3小时
- 使用时间：≥15小时
- 无线播放距离：约10米（空旷地带）
- 音乐媒介支持：MP3、WAV
- TF卡容量支持到：64GB
- 单机重量：116g
- 产品规格：93x77x30mm

标准配置

E128扩音器	1台
HM-850头戴麦克风	1个
USB充电线	1条
绑带	1条
合格证	1张
说明书	1份

适用场合

- 教学、导游、培训、促销、宣传、晨练、娱乐等场合扩音

Dear Customer,


Thank you for purchasing TAKSTAR E128 multimedia amplifier. Please read the user manual carefully before operation and keep it for reference in future.

If you have any question or suggestion, please contact our local dealer.

Features

- A portable digital amplifier combining microphone, power amplifier, speaker cabinet, charger and battery together
- Integrated digital electro-acoustic technology, high output power up to 8W
- Designed with single song repeat and TF card multimedia audio files music playing function
- Supports mobile phone wireless music play function, high efficient and stable transmission
- Built-in high capacity Li-ion battery, 3 hours of recharging lasts for more than 15 hours operation
- Flexible wearing styles for convenient use
- Ergonomic design, fashionable contour

Function Illustration

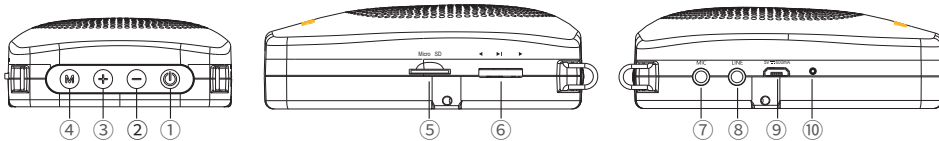

- ① Power switch ⏻ : long press the power switch for 2 seconds to turn on. The green LED lights up (the voice prompt appears). After being turned on, if the unit has no connection with other equipments, the unit is in standby status. After 5 minutes, if it has no connection with other equipments, it turns off automatically.
- ② Main volume $-$: short press it to decrease the volume one level, long press it to decrease continuously. When the volume decreases to minimum, the level keeps -10dB.
- ③ Main volume $+$: short press it to increase the volume one level, long press it to increase continuously. When the volume increases to maximum, it has beep sound prompt.
- ④ Input switching mode M : short press this button to switch the input mode, long press it 2 seconds to set or cancel single song repeat.
- ⑤ TF card port: when the TF card is inserted, it automatically switches to TF card and play, the blue LED flashes slowly (insert according to the direction instruction. Press the card and then release, the card automatically exits).
- ⑥ Media function button: repeatedly press the media function button ▶| to play /pause the music. The blue LED flashes slowly when playing, and keeps lighting blue when pause. Roll the media function button ▶ upward and release the switch for previous song. Roll the media function button upward and press it, the media volume increases. Roll the media function button ◀

downward and release the switch for next song. Roll the media function button downward and press it, the media volume decreases.

- ⑦ Microphone input socket: insert the $\text{Φ}3.5\text{mm}$ microphone plug into this socket for speaking. Do not point the microphone cartridge to the amplifier speaker to avoid feedback (when the microphone is connected, the amplifier automatically stops all playing. The user needs to press the play button to play music ▶|).
- ⑧ Line input socket: when the 3.5 audio cable is inserted, the blue LED keeps lighting. The amplifier automatically stops all the playing and it can be used as active speaker cabinet (when the line signal inputs, it is the fixed mode, it can not switch with media function).
- ⑨ Micro USB recharging input port: this port is used to recharge the battery.
- ⑩ Recharging LED: it lights up red during recharging, and green when the amplifier is recharged fully.

Operation Instruction

1. Wear the headworn microphone correctly, and adjust the pickup angle and distance of the microphone.
2. Insert the $\text{Φ}3.5\text{mm}$ microphone plug into the microphone input socket.
3. Turn on the power, the power supply LED lights up, adjust the volume control to a proper level.
4. During operation, if the power voltage LED lights red and voice prompt, it means the battery is low, please recharge in time.

Cautions

To avoid personal injury or property loss caused by electric shock, over temperature, fire, radiation, explosion, mechanical risk and improper use, please read carefully and abide by the following items before operation:

1. Please check if the power of the connected equipment matches with that of this product before operation. Adjust the volume to proper level during operation. Do not operate at over-power or high volume level for a long time to avoid abnormal functioning or hearing loss.
2. If abnormal phenomenon (smoke, abnormal smell) happens, please turn off the power switch and disconnect the power plug with power socket, and send the product to local dealer for maintenance.
3. The product and accessories should be put in dry and ventilated place rather than humid or dusty environment. Prevent the product from fire, liquid, rain, water, over-colliding, throwing, vibrating, vent hole covered to avoid function damage.
4. When the product needs to be installed on wall or ceiling, please fix it tightly to avoid dropping risk.
5. Please abide by safety rules during operation. Do not use the product in the place prohibited by regulation or law to avoid accident.
6. Do not disassemble or repair the product by yourself to avoid personal injury. If you have question or need service, please contact the local dealer.