TAKSTAR®得胜





LA380W

开放式无线耳机

OPEN-EAR WIRELESS HEADPHONES

使用手册 | User Manual

■ 前言

尊敬的用户:

感谢您选购得胜LA380W开放式无线耳机,为了您能够更好的了解使用本

产品,建议您在使用前仔细阅读本使用手册。

若存在有疑问或者您有宝贵的建议,可通过拨打得胜官方服务热线4006828333或微信扫描二维码关注得胜官方公众号与我们联系。

■ 产品特性

- Ø14.2mm动圈单元, 搭配低音增强算法, 三频均衡更自然;
- 开放式实时聆听环境声, 保持耳道清爽, 肆意享受运动;
- •无线连接V5.4, 抗干扰性能出众, 连接更快、更稳定;
- 支持双设备同时连接, 实现音频在设备间的自由切换;
- •综合续航30小时,满足全天候畅听音乐,告别电量焦虑;
- IPX4防水, 无惧汗水细雨飞溅, 专注运动节奏;
- •符合人体工学可调节角度的挂耳设计,长久佩戴也舒适。

■ 适用范围

适用户外运动、日常通勤、欣赏音乐等场合

■ 标准配置

• 开放式无线耳机 1对

充电仓 1只

• 使用手册 1份

充电线 1条

■ 技术参数

- •无线连接版本: V5.4
- 单元直径: Ø14.2mm动圈单元
- •工作频段: 2400-2483.5MHz
- •频率响应: 20Hz-20kHz
- 单元阳抗: 320+15%
- 最大输出功率: 20mW
- 额定输出功率: 10mW
- 麦克风类型: 硅麦
- 指向性: 全指向
- 灵敏度: -38dB+3dB

- •耳机电池规格: 3.7V/60mAh
- 充电仓电池规格: 3.7V/600mAh
- 充电方式: USB 5V/600mA
 - 充电时间: 耳机约1.75H, 充电仓约1.5H
 - •续航时间: 耳机约7.5H, 搭配充电仓综合约30H
 - 单耳重量: 约10g
 - 充电仓重量: 约56.5g
 - •传输范围: 15米 (无障碍空旷空间)

注:

- 1) 以上数据由得胜实验室测试得到,并拥有最终解释权!
- 2) 实际续航时间可能会因使用状况(音量、音源、干扰、不同设备等)存在有所差异。
- 3) 传输范围将视设备之间的障碍物、周围磁场、静电等因素而变化。

■ 佩戴示意



置于耳朵上方



沿着王廓旋入




调整耳机夹角完成佩戴

■ 防护等级(IPX4)说明

此产品可抗水、抗汗,在受控实验室条件下经测试,达到GB/T4208-2017标准下IPX4级别(等同于IEC IPX4: 防溅水,从外壳各方向溅水无有害影响)。


其抗水、抗汗功能并非永久有效,防护性能可能会因日常磨损而下降。抗水、抗汗条件适用于耳机机身,不适用于耳机充电仓部份,切勿将耳机或充电仓浸泡水中或在水流下冲洗,切勿将液体溅入充电仓,可能造成液体渗入;适用液体为淡水、自来水、汗水,注意不防除上述以外的液体(例如:肥皂水、清洁剂水、含沐浴液的水、洗发水、热温泉水、热水、海水等)。

■ 功能示意

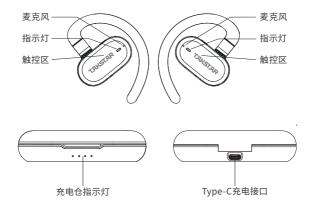

■ 使用说明

 一、开/关机



开机: 打开充电仓盖, 耳机自动开机进入配对模式。

关机:将耳机放入充电仓,合盖自动关机。

二、配对连接

首次使用本机时,需要与手机或无线播放设备配对连接,步骤如下:

- 1. 充电仓开盖后, 耳机自动开机并进入搜索配对状态。
- 注:如需重新连接其他设备,将耳机放入充电仓中,长按充电仓配对键3秒,耳机指示灯白灯闪烁、则进入配对模式。
- 2. 打开智能设备"设置"菜单,找到无线连接列表,搜索"TAKSTAR LA380W"进行连接、连接成功后伴随提示音。



三、双设备连接

 
- 1. 当耳机与A设备连接成功时, 先将A设备无线连接功能关闭。
- 2. 重复配对操作, 使得耳机与B设备连接。
- 3. 与B设备连接成功后, 此时请手动回连A设备完成配对, 即可实现双设备连接。
- 4. 如需切换播放音频的设备时,则需将当前播放音频的设备暂停,再控制另一台设备播放即可。

注:

- 1. 耳机支持记忆功能, 开机后, 将自动回连最后一次成功连接过的智能设备。
- 2. 耳机断开连接, 或超出连接范围外, 回连时间3分钟, 超时将自动关机。
- 3. 双设备连接功能在下次耳机开机后,两台设备都在连接范围内时,将会自动连接两台设备,无需重复操作。

四、触控操作


1. 媒体控制



2. 双方通话



 3. 三方通话 (通话中,新呼入)



五、电量状态与充电

电量显示

• 充电仓开盖与合盖, 显示充电仓电量信息。


| 亮灯状态 | 对应充电仓电量 |
|------|--------------|
| 1颗灯亮 | 电量剩余0%-25% |
| 2颗灯亮 | 电量剩余25%-50% |
| 3颗灯亮 | 电量剩余50%-75% |
| 4颗灯亮 | 电量剩余75%-100% |

耳机充电

当将耳机放入充电仓耳机磁吸卡位内并合盖即可自动充电;最左侧和最右侧充电仓指示灯分别对应耳机L和耳机R充电状态。

充电中: 指示灯呼吸慢闪

充满电: 指示灯熄灭

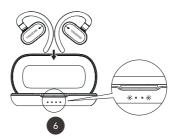

充电仓充电

•接入标配的充电线为充电仓充电。

充电中: 指示灯逐级点亮

充满电: 指示灯均常亮

注: 充电必须使用输出电压5V适配器,勿使用大于5V适配器进行充电,可能会造成损坏。为确保充电效率建议使用输出电流1A或以上的适配器进行充电。



六、重置复位

耳机放入充电仓中,长按充电仓配对键10秒,耳机指示灯熄灭后,即清除所有配对信息完成复位,重新进入配对状态。

■ 安全使用说明

为了您有一个安全与舒适的体验,请仔细阅读并遵守以下事项:

- 1. 为了避免听力受损,请务必在连接耳机前将播放设备音量调小。在将耳机佩 戴入耳内/耳上之后,再逐步调大至您聆听舒适的音量。噪音是以分贝(dB)为 计量单位的, 外界任何85分贝及以上的噪音都会导致听力逐渐受损。
- 2. 请注意您的使用习惯。音量和时间对听力损失的影响成正比的关系, 音量越大, 您的聆听时间越短; 音量越舒适, 您聆听的时间越长。长时间使用较高的音量会对您的听力造成损伤。

以下分贝 (dB) 表对某些常见声音进行比较,并列出了它们可能对听力的潜在危害等级。

| 声音来源 | 噪声等级 | 听力影响 |
|----------------------------|-------|--|
| 细声低语 | 30dB | 非常安静 |
| 安静的办公室 50-60dB | | 舒适的听力级别在60dB以下 |
| 吸尘器/吹风机 | 70dB | 有一定入侵性,造成干扰妨碍电话交谈 |
| 食物料理机 85-90dB | | 85dB是开始造成听力受损 (连续8小时)的级别 |
| 垃圾清理机 混泥土搅拌机 | 100dB | 建议无保护措施而暴露在90-100dB声音 之下的时间不要超过15分钟 |
| 电锯/电钻 | 110dB | 经常暴露于超过100dB的声音1分钟以上 会有听力受损的风险 |
| 摇滚音乐会 (因情况而异) 110-140dB | | 感觉疼痛的阀值在120dB左右开始 |

■ 维护及保养

- 1. 请储存于干燥洁净环境, 使用中避免液体进入耳机内部、跌落或碰撞, 以免损坏;
- 2. 勿在高温高湿的场所长时间使用耳机,容易造成耳机损坏或降低使用寿命;
- 3. 耳机在放置时要避免与强磁体接触,以免耳机的恒磁体去磁,使耳机的灵敏度降低而影响影响耳机音色;
- 4. 勿使用烈性化学制品、清洁剂,清洁耳机;
- 5. 不要用尖锐物品在产品表面剐蹭,以免损坏外壳、影响外观;
- 6. 耳机长时间不使用时,应存放在干燥清洁的地方,避免在温度过高或过度潮湿的场所保管或使用。

■ 注意事项

▲ 危险

| 为确保您的人身安全,请勿将该耳机佩戴或放置在离心脏起博器过近的位置(小于10cm)。 | ⊘ 禁止 |
|---|------|
| 请勿将线材插头插入电源插座。 | ⊘ 禁止 |
| 为了您与其他交通参与者的安全,驾驶车辆、骑自行车或马路上 行走时,请勿使用耳机。 | ● 执行 |
| 请勿将耳机靠近明火或置于火中,以免发生爆炸。 | ⊘ 禁止 |

▲ 警告

| 儿童应在成人监督下使用本产品,本产品并非玩具。 | ● 执行 | |
|---|------|---|
| 使用该产品时需遵守相关安全规定,法律法规明确禁止使用场合请勿使用本产品,以免导致意外事故。 | ● 执行 | 1 |

■ 安全警示

为避免电击、高温、着火、辐射、爆炸、机械危险以及使用不当等可能造成的人身伤害或财产损失,使用本产品前,请仔细阅读并遵守以下事项:

- 1. 使用产品时请确认所连设备与本产品是否匹配以及合理调整音量大小,不要 在超过产品功率及大音量下长时间使用,以免造成产品异常;
- 2. 使用中若发现有异常(如冒烟、异味等),请立即关闭电源开关并拔掉电源插头,然后将产品送售后服务网点检修:
- 3. 本产品及附件都应放置在室内干燥通风处,请勿长期存放在潮湿、灰尘多的环境,使用中避免靠近火源、雨淋、进水、过度碰撞、抛掷、振动本机及覆盖通风孔,以免损坏其功能;
- 4. 若产品需要固定于墙壁或天花板上时,请确保固定到位,防止因固定强度不足导致产品发生跌落危险;
- 5. 使用该产品时需遵守相关安全规定, 法律法规明确禁止使用场合请勿使用本产品, 以免导致意外事故;
- 6. 请不要自行拆机改装或维修,以防止出现人身伤害,如有问题或服务需求请 联系当地售后服务网点跟进处理。

■ 环保说明

产品中有毒有害物质或元素的名称及含量标识表

| | 有毒有害物质或元素 | | | | | |
|-------|-----------|-----------|-----------|-----------------|---------------|-----------------|
| 部件名称 | 铅 (Pb) | 汞 (Hg) | 镉 (Cd) | 六价铬 (Cr(VI)) | 多溴联苯 (PBB) | 多溴二苯醚 (PBDE) |
| 塑料部件 | 0 | 0 | 0 | 0 | 0 | 0 |
| 金属部件 | × | 0 | 0 | 0 | 0 | 0 |
| 电路板组件 | × | 0 | 0 | 0 | 0 | 0 |
| 线缆 | × | 0 | 0 | 0 | 0 | 0 |

本表格依据SJ/T 11364的规定编制

- ○:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。
- ×:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。

此标志为产品的环保使用期限标志,

且此标保使用期限只适用于产品正常工作的温度和湿度等条件。



电池部分的环保使用期限为5年。



■ 关于图标含义解释

- 根据RL2004/108/EG和European Low Voltage Directive(欧洲低电压指令)RL2006/95/EG的测试结果表明,本产品符合欧共体关于电磁兼容性的成员国法律整合的指令中所规定的限值。
 - 未经合规方明确批准的变更或修改可能会使用户失去操作设备的权限。 此设备符合FCC规则第15条部分的要求。操作须符合以下两个条件:
- (1) 此设备可能不会造成有害干扰,
- (2) 此设备必须接受接收到的任何干扰,包括可能导致意外操作的干扰。



此符号表示,根据WEEE指令(2012/19/EU)和国家法律,由于这种类型 的废弃物会有潜在的有害物质,可能对环境和人类健康产生负面影响,

所以本产品不应与您的家庭垃圾一起处置,应将本产品应交由授权的

电气和电子设备(WEEE)回收站回收。同时,您在正确处理本产品的同时将有助于自然资源的有效利用。如需了解更多有关您可以在何处放置废物回收设备的信息,请联系您当地的城市办事处、废物管理局或家庭废物处理服务部门。

■ 关于本使用手册

本使用手册中内容符合截止印刷之日的技术规格。由于得胜公司会不断改进产品,本使用手册可能不符合您的特定产品的技术规格。要获取最新版使用手册,请访问得胜官网,然后下载使用手册文件。技术规格、设备或另售的附件在各个地区可能有所不同,如有问题请与当地得胜销售网点确认。如需更多支持和深层产品信息,请浏览得胜官方网站:https://www.takstar.com

版权所有 ©2024 得胜。得胜、TAKSTAR及其各自标志是广东得胜电子有限公司在中国和/或其他国家/地区的注册商标或商标。所有其它商标均是其各自所有者的财产。

■ Preface

Dear Customer.

Thanks for purchasing our product. Read this manual thoroughly to use the product properly.

If you have any questions or suggestions, please contact our local sales service

■ Features

- Ø14.2mm dynamic driver with bass enhancement for balanced sound.
- Open-ear design for ambient listening, keeping ears fresh during workouts.
- Wireless V5.4 connection for fast, stable connections.
- Dual-device connectivity for seamless audio switching.
- Enjoy music all day with 30 hours of battery life total.
- IPX4 protection against sweat and light splashes.
- Adjustable ergonomic ear hooks for long-lasting comfort...

Applications

Outdoor activities, commuting, and music enjoyment.

■ Package Contents

- 2 × Earbud
- 1 × Charging Case
- 1 × Charging Cable
- 1 × User Manual

■ Specifications

- Wireless Version: V5.4
- Operating Frequency: 2400-2483.5MHz
- Driver Diameter: Ø14.2mm dynamic
- Frequency Response: 20Hz 20kHz
- Impedance: $32\Omega \pm 15\%$
- Max Output Power: 20mW
- Rated Output Power: 10mW
- Microphone Type: Silicon mic
- Polar Pattern: Omnidirectional
- Sensitivity: -38dB ± 3dB
- Headphone Battery: 3.7V/60mAh
- Charging Case Battery: 3.7V/600mAh
- · Charging Method: USB 5V/600mA
- Charging Time: Headphones approx. 1.75H, charging case approx. 1.5H
- Battery Life: Headphones approx. 7.5H, total approx. 30H with case
- · Weight (Single Earbud): Approx. 10g
- · Weight (Charging Case): Approx. 56.5g
- Transmission Range: 15m (open space)

Note:

- 1) The above data are measured by Takstar laboratory which has the final interpretation right!
- 2) Actual battery life may vary based on factors such as volume, audio source, interference, and device differences.
- Transmission range may change due to obstacles, surrounding magnetic fields, and static electricity between devices.

■ Wearing Illustration







Position above ear.

Rotate into the ear along ear contour.


Adjust angle for a secure fit.

■ IPX4 Protection

This product is water and sweat-resistant, tested under controlled lab conditions to meet GB/T4208-2017 standards for IPX4 (equivalent to IEC IPX4: protection against splashing water from any direction with no harmful effects).


The water and sweat-resistant features are not permanently effective and may diminish due to daily wear. These features apply to the headphone body and do not extend to the charging case. Do not submerge the headphones or charging case in water or rinse them under running water, and avoid spilling liquids into the charging case to prevent liquid ingress. Suitable liquids include freshwater, tap water, and sweat, but they do not protect against other liquids (e.g., soapy water, cleaning solutions, water with body wash, shampoo, hot spring water, hot water, and seawater).

■ Function Descriptions

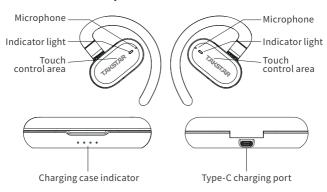

Operating Instructions

 A. Power On/Off



Power On: Open the charging case and take out the earbuds. They will automatically power on and start pairing.

Power Off: Simply place the earbuds back into the charging case to automatically power them off.



B. Wireless Pairing

When using the earbuds for the first time, you need to pair and connect them with your smartphone or wireless playback device. Follow these steps:

1. Take the earbuds out of the charging case. They will automatically power on and start pairing.

Note: To reconnect to another device, place the earbuds in the charging case and press the pairing button for 3 seconds until the headphone indicator light flashes white to restart pairing.

 Open the Settings menu on your smart device and navigate to the wireless connection list. Search for TAKSTAR LA380W and select it for connection. You will hear a confirmation sound when successfully connected.



C. Dual Device Connection

- 1. Turn off the wireless function on Device A after successful connection.
- 2. Repeat the pairing process to connect with Device B.
- 3. After connecting to Device B, manually reconnect to Device A to complete dual device pairing.
- 4. To switch playback devices, pause the current device and control playback on the other device.




Notes:


- ${\bf 1.} \ The\ headphones\ have\ a\ memory\ function\ and\ will\ auto\ reconnect\ to\ the\ last\ paired\ device\ upon\ powering\ on.$
- 2. If disconnected or out of range, reconnection time is 3 minutes; after this, the headphones will auto power off.
- 3. To reconnect to other devices, place the headphones in the charging case, press the case button for 3 seconds until the white indicator flashes, entering pairing mode.
- 4. Dual device connection will automatically occur on the next power-on if both devices are within range, requiring no repeat actions.

D. Touch Control Operations


1. Media Control

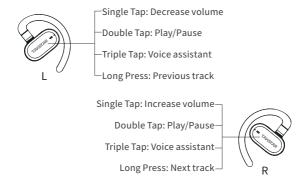

 2. Dual Call



3. Three-Way Call (Incoming call during an ongoing dual call)

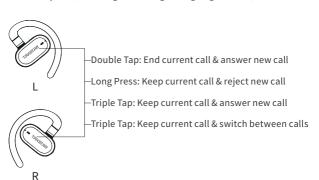

E. Battery Status and Charging

Battery Display


• Opening or closing the charging case shows battery status.

| Light Status | Battery Level |
|--------------|--------------------|
| 1 Light | 0%-25% remaining |
| 2 Light | 25%-50% remaining |
| 3 Light | 50%-75% remaining |
| 4 Light | 75%-100% remaining |

Headphone Charging

• Place headphones in the magnetic slot of the charging case and close the lid to initiate charging automatically. The left and right charging case indicator lights correspond to the charging status of the left (L) and right (R) headphones.

Charging: Indicator light breathes slowly. Fully charged: Indicator light turns off.

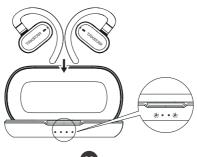

Charging Case Charging

• Use the supplied charging cable to charge the case.

Charging: Indicator lights illuminate sequentially.

Fully Charged: All indicator lights remain on.

Note: Charging must be done with a 5V output adapter; do not use adapters exceeding 5V to avoid damage. For optimal charging efficiency, it is recommended to use an adapter with an output current of 1A or higher.



F. Resetting

To reset the headphones, place them in the charging case and press the pairing button for 10 seconds until the headphone indicator light turns off, clearing all pairing information and entering pairing mode again.

■ Correct Operation

For safe and comfortable operation, please read carefully and abide by the following items:

- 1. To avoid hearing loss, set the volume of the player to minimum before connecting the headset. After putting the earphone on, increase the volume to a proper level. Noise is measured in decibels (dB). Any outside noise of 85 decibels or more will cause gradual hearing loss.
- 2. Please pay attention to your operation habits! Volume and duration are proportional to hearing loss. The higher the volume, the shorter the time you should listen; the more comfortable the volume is, the longer you can listen. Listening at high volume for long will cause damage to your hearing.

This dB level chart compares some common noise sources and their potential danger to your hearing:

| Sound Source | Noise Level | Consequence on Hearing |
|--|-------------|--|
| Whisper | 30dB | Very quiet |
| Quiet office | 50-60dB | Comfortable hearing level is below 60dB |
| Vacuum cleaner/ hair dryer | 70dB | Somewhat invasive and may interfere with phone calls |
| Food processor | 85-90dB | 85dB (continuously 8 hours) will begin to hurt hearing |
| Garbage cleaning machine/ cement mixer | 100dB | Exposure to sound of 90~100dB is suggested to be within 15 minutes if without protection |
| Electric saw/ electric drill | 110dB | Frequent exposure to over 100dB for more than 1 minute can impair hearing |
| Rock concert (subjective) | 110-140dB | Painful hearing starts at about 120dB |

Maintenance

- 1. Please keep it in a dry and clean environment. During operation, prevent damage from water ingress, drop or collision.
- 2. Operating the headset in high temperature or high humidity for long can lead to device damage or shortened service life.
- 3. Keep the headset away from strong magnet to avoid demagnetizing and decreased sensitivity and performance.

- 4. Do not use strong chemical or detergent for cleaning.
- 5. Do not scratch the product surface with sharp objects.
- 6. Store in a clean, dry area if not used for a long period. Keep and use away from areas of high temperature and humidity.

Cautions

⚠ DANGER

| To ensure your personal safety, do not wear or place the headset too close to the pacemaker (less than 10cm). | ⊘ Prohibited |
|--|--------------|
| Do not insert the cable plug into live power socket. | ⊘ Prohibited |
| For your safety and the safety of other traffic participants, do not use the headset while driving a vehicle, riding a bicycle or walking on the road. | Follow |
| Keep away from fire to avoid explosion. | ⊘ Prohibited |

⚠ WARNING

| Not a toy. Children should not use without adult supervision. | Follow |
|---|--------|
| Abide by relative safety rules during operation. Do not use it if prohibited by laws and regulations to avoid accident. | Follow |

■ Safety Instructions

To avoid electric shock, overheat, fire, radiation, explosion, mechanical risk and injury or property loss due to improper use, please read and observe the following items before use:

- 1. Please check if the power of the connected equipment matches with that of this product before operation. Adjust the volume to proper level during operation. Do not operate at over-power or high-volume level for extended time to avoid product malfunction.
- 2. If there is any abnormality during use (e.g., smoke, strange odor), please kill the power switch and unplug from power source, then send the product to the local after-sales service for repair.
- 3. Keep this product and its accessories in a dry and ventilated area. Do not store in a humid or dusty area for extended time. Keep away from fire, rain, liquid intrusion, bumping, throwing, vibrating, or from blocking any ventilation openings, to prevent malfunction.
- 4. The product must, when installed on walls or ceilings, be fixed firmly in place at adequate strength to prevent from falling.
- 5. Please abide by safety rules during operation. Do not use the product in places prohibited by laws or regulations to avoid accident.
- 6. Do not disassemble or repair the product by yourself to avoid injury. If you have any questions or require any services, please contact our local after-sales service.

■ Label Meanings

This device is compliant with the limits of the European Council Directive on the approximation of the laws of the member states relating to electromagnetic compatibility according to RL2004/108/EG and European Low Voltage Directive RL2006/95/EG.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by the complying party may cause the user to lose permission to operate the device.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

FCC ID: WRALA380W



This symbol indicates that this product should not be disposed of with your household waste, according to the WEEE directive (2012/19/EU) and your national law. This product should be handed

over to an authorized collection site for recycling waste electrical and electronic equipment (WEEE). Improper handling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with WEEE. At the same time, your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, waste authority, or your household waste disposal service.

■ About This Manual

This manual contains up-to-date technical specifications as of printing. However, specifications contained herein may not conform to your particular product since Takstar is constantly improving its products. Also, specifications, devices or accessories available may vary from region to region. If you have any questions, please contact our local sales outlet. For the latest version/more information, please visit our website: https://www.takstar.com/

Copyright ©2024 TAKSTAR. TAKSTAR, TAKSTAR and its respective logos are registered trademarks or trademarks of Guangdong Takstar Electronic Co., Ltd. in the PRC, and/or other countries. All other trademarks are the property of their respective owners.

用户妥善保管,如有 遗失,恕不保修或退

2. 保修期限制: 购买之

坏外,由本公司负责, 3.除了不可抗力事件损 日起十二个月内。 免费维修。

产品服务保证书

地址:

益化: - 田極

1. 本单为保修凭证,请

注意事项:

购买日期:

#

Щ

田期

维修员签名

维修记录栏(由维修员填写) . 짧음: 电话:

5. 擅自拆卸维修者,不

修点将酌情收费。

6. 以上保修条款仅限于 中国市场适用(不包

含港澳台地区)

4. 如属保管不善或使用

不当造成的损坏,维

◆广东得胜电子有限公司 ◆电话:400-6828-333 ◆地址:广东省惠州市博罗县龙溪街道富康一路2号



扫一扫,了解更多产品 Scan for more product information

广东省电声工程技术研究开发中心 广东 得 胜 电 子 有 限 公 司 制 造

地址: 广东省惠州市博罗县龙溪街道富康一路2号服务热线: 400 6828 333 传真: 0752 6383950

邮箱:xs@takstar.com 网址:www.takstar.com

Designed & Manufactured by:

Guangdong Takstar Electronic Co., Ltd. Address: No.2 Fu Kang Yi Rd., Longxi Boluo Huizhou, Guangdong 516121 China Tel: 86 752 6383644 Fax: 86 752 6383952

Email: sales@takstar.com

Website: www.takstar.com